



Whitehall Manufacturing®
Manufacturer of Healthcare and Rehabilitation Products since 1946

Surgical Scrub Sinks

Division of
Acorn Engineering Company®




A MEMBER OF



Whitehall Compact Surgical Scrub Sink ADA Compliant Three Station

Model 4123ADA

Please visit www.whitehallmfg.com
for most current specifications.

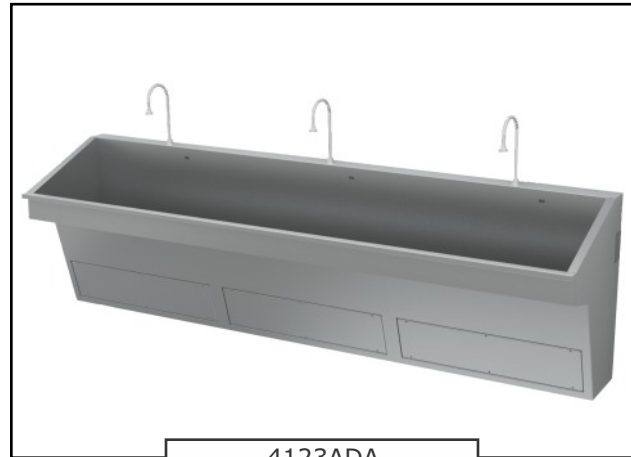

4123ADA

Fixture May Show Some Available Options

Surgical Scrub Sink is designed for use in health care institutions providing surgeons with a convenient sink for pre-op scrub up.

Fixture is fabricated from heavy gage, type 304 stainless steel and is seamless welded construction with a satin finish. The cabinet interior is sound-deadened with a fire-resistant material. The unit is designed to be installed on the wall using a mounting carrier.

Scrub Sink is provided with a front panel which is easily removed for access to the water control valves, waste connections, stops and strainers. Scrub sink has a sloping bottom surface to minimize splashing and a 1-1/2" OD P-Trap assembly with a 3" flat strainer drain.

Backsplash has a gooseneck spout assembly with sprayhead that can be removed for sterilization.

Hands Free Operation includes infrared sensor located on back panel.

T/P Temperature/Pressure Balancing Mixing Valve is located behind the front panel and maintains a constant water temperature. This easily adjustable, anti-scald valve compensates for inlet temperature fluctuations slow closing, anti-water hammer type.

Optional -EFW Eye/Face Wash provides a Safety Manufacturing™ Model S0660 Series Swing Down Eye-Face Wash within Sink Trough and includes Factory installed Controls® Model ET71-1-BVS-OTG Safety Mixing Valve with Temperature Gauge and Stop Valves.

Models with -EFW Option comply with USP 800, Section 5.3 Eyewash Station Requirements.

GUIDE SPECIFICATION

Provide Whitehall ADA Compact Surgical Scrub Sink (specify model number and options). Fixture shall be fabricated from heavy gage, type 304 stainless steel, with seamless welded construction with a satin finish. Cabinet interior shall have a sound deadening, fire-resistant material. Cabinet shall also have removable access panel to allow access to water control valves, waste connections, stops and strainers. Sink shall have a sloping bottom to minimize splashing, and a 1-1/2" OD P-Trap assembly with a 3" flat strainer drain. Gooseneck shall have a removable sprayhead. Fixture shall have a T/P temperature/pressure balancing mixing valve with slow closing, anti-water hammer solenoid valve, infrared sensor and transformer. Transformer must be wired to a GFI protected circuit. Manufacturer shall provide necessary installation instructions.

Please visit www.whitehallmfg.com
for most current specifications.



MGICONTROLS INSIDE

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681

4123ADA

REV: 08/30/2024



BASE MODEL NUMBER

☐ 4123ADA Compact Surgical Scrub Sink (3 Station)

MOUNTING

☐ -MC Mounting Carrier

Product Options

☐ -EFW Eye/Face Wash (Must Specify Below)

☐ LH Station ☐ RH Station

☐ CTR Station

NOTE: When specified, ET71-1-BVS-OTG Emergency Mixing Valve will be provided

☐ -LFN Laminar Flow Nozzle


☐ -SA Splash Panel

☐ -SWV Swivel Nozzle on Gooseneck

Accessories



An appropriate Chronomite Instantaneous Tankless Water Heater may be purchased separately to ship with your scrub sink. Contact your sales rep for details or visit www.chronomite.com

Please visit www.whitehallmfg.com for most current specifications.

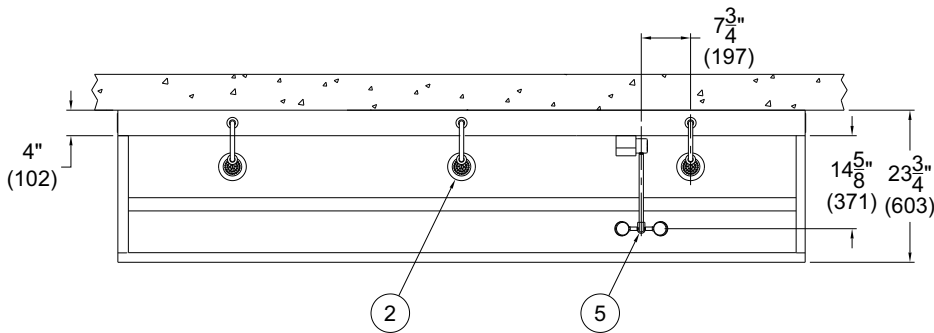

NOTES:

1. Gooseneck Spout Assembly
2. Flat Strainer Drain
3. Removable Access Panel
4. Infrared Sensor
5. Optional -EFW Eye/Face Wash

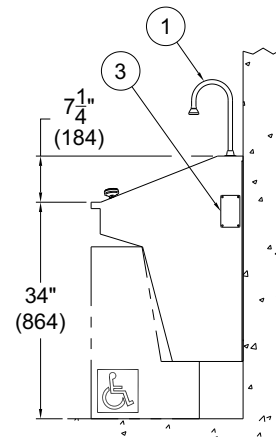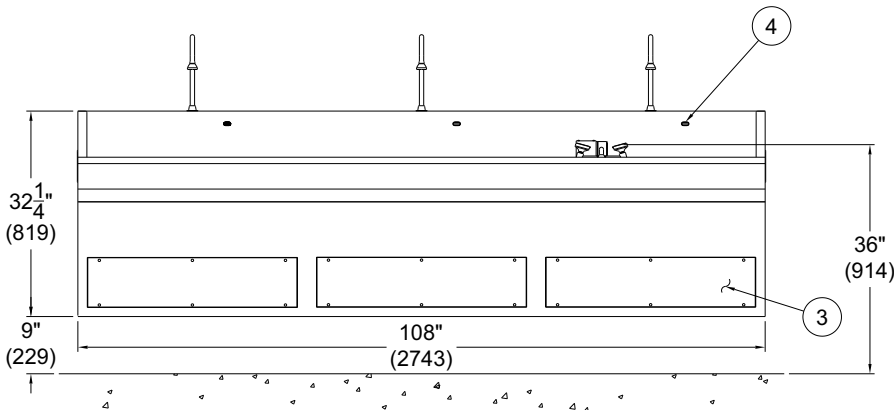

MODEL# 4123ADA-MC-EFW_RH

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

SELECTION SUMMARY & APPROVAL FOR MANUFACTURING

Model Number & Options _____ Quantity _____
Company _____ Date _____
Contact _____ Title _____
Approval for Manufacturing/Signature _____

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data. © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.