



Whitehall Manufacturing®
Manufacturer of Healthcare and Rehabilitation Products since 1946

Care-Ware® Bedside Patient Care Units

Division of
Acorn Engineering Company®



A MEMBER OF



Whitehall Bedside Patient Care Unit 37" Wide (formerly referred to as Versalette)

Model
4040



4040-L-1

Fixture May Show Some Available Options

Cabinet surface is either high pressure laminate with interior surface stain-resistant melamine laminate or polyethylene panels. Specify cabinet material and color selection. Corners are rounded with soft edges. Cabinet features a unique angled door which swings open to allow access to the bedpan washer and toilet paper holder. Cabinet includes a pivoting, padded toilet cover and back rest which doubles as a bedside seat. Seat color selection is determined by factory. Base molding for the cabinet is by others.

Counter has a 3" backsplash. Specify countertop material and color selection.

Toilet is stainless steel, wall mounted siphon jet type with white plastic seat and self-sustaining check hinge.

Hydraulic Flush Valve is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF.

Bedpan Washer is concealed within cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose.

An elevated pressure type vacuum breaker by others is recommended with this selection to prevent back-siphonage or backflow from occurring and possibly contaminating the water supply. Consult local codes for back flow prevention device requirements. Optional -BWD Bed Pan Washer Drain is recommended.

Metal Template is provided for ease of installation.

Infectious Control Flush (-FCI) is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. Activation of Toilet Flush will only be possible with Toilet Cover in the closed position.

GUIDE SPECIFICATION

Provide and install Whitehall 37" wide Bedside Patient Care Unit (specify model number and options). Cabinet surface to be high pressure laminate or polyethylene panels. Base molding by others. Includes pivoting padded seat cover with back rest, hydraulic flush valve, access panel and toilet paper holder. Wall mounted, elongated, stainless steel toilet bowl with 1.6 GPF and self-sustaining hinged seat. Wall carrier by others. Concealed bedpan washer cabinet shall include a handheld bedpan washer with positive shut-off and stainless steel hose.

Please visit www.whitehallmfg.com for most current specifications.



Member of
U.S. Green
Building
Council



Recyclable
Product




Water
Conserving
Product

Complies
with the
following
standards:





Federal
Public Law
111-380
(No Lead)


Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

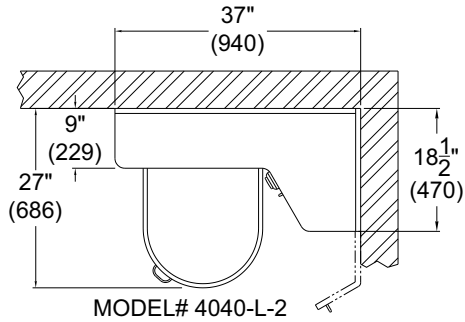

MODEL# 4040-L-2

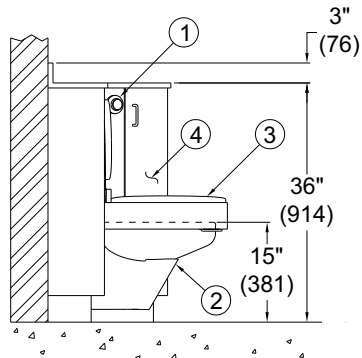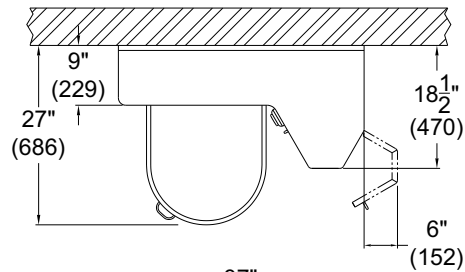


MODEL# 4040-L1


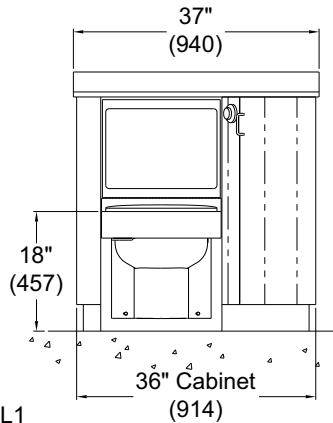


NOTES:


1. Flush Valve Pushbutton
2. Stainless Steel Toilet
3. Pivoting Padded Toilet Cover
4. Bedpan Washer Compartment

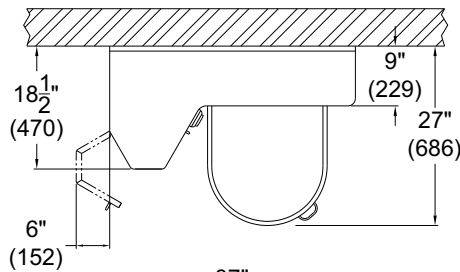

MODEL# 4040-R-3

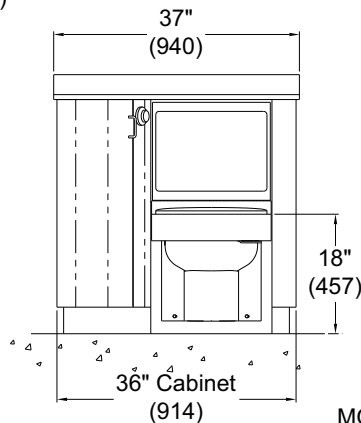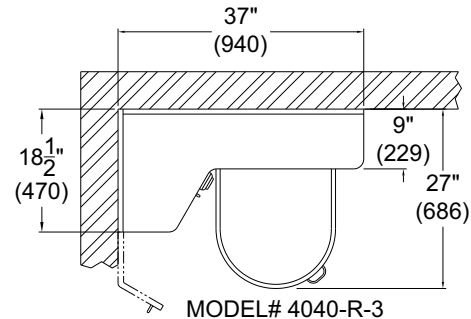

MODEL# 4040-R-1

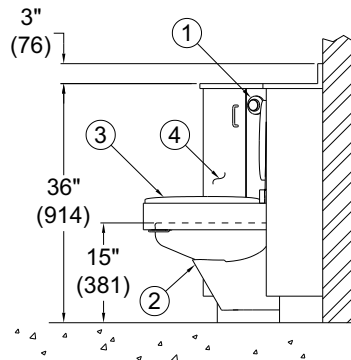


All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.




-FCI OPTION INFECTIOUS CONTROL FLUSH UNIT DETAILS


(L.H. Unit Shown - R.H. Unit Opposite)

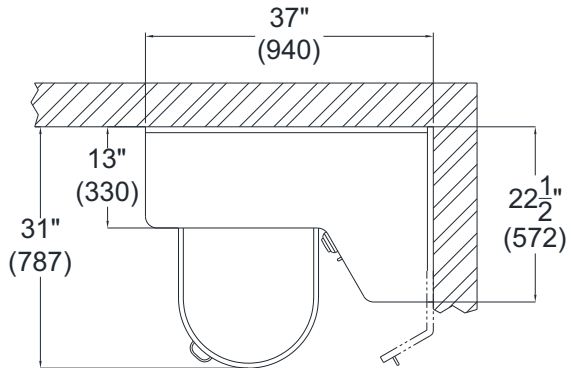


MODEL# 4040-L-2-FCI

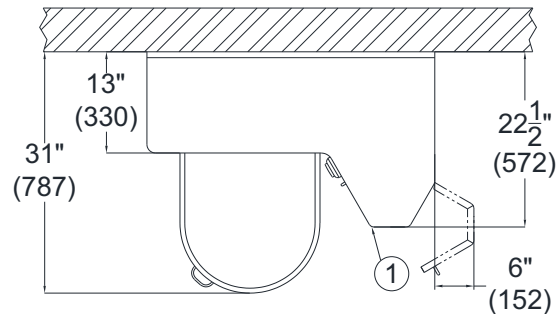

MODEL# 4040-L1-FCI

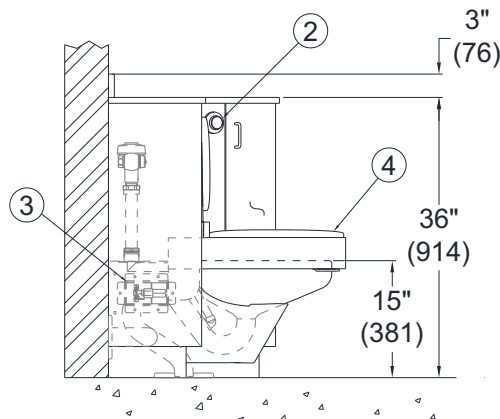

SIDE VIEW

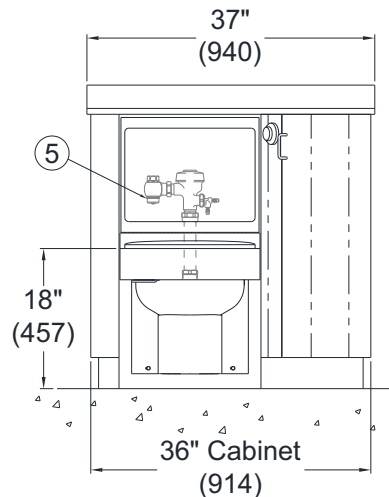

FRONT VIEW

NOTES:

1. Extended Cabinet
2. Flush Valve Pushbutton
3. -FCI Switch/Control Assy
4. Pivoting Toilet Cover
5. Hydraulic Flush Valve (Located in Stationary Cabinet)

NOTE: Infectious Control Flush (-FCI) is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. Activation of Toilet Flush will only be possible with Toilet Cover in the closed position. Cabinet size and Flush Valve location changes to accommodate device.

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.



MODEL NUMBER AND OPTIONS SELECTION

BASE MODEL NUMBER (Must Specify)

☒ 4040 37" Wide

TOILET MOUNTING AND WASTE (Must Specify)

- ☐ -OFFW Off-Floor, Wall Outlet
☐ -ONFF On-Floor, Floor Outlet
☐ -ONFW On-Floor, Wall Outlet

TOILET ORIENTATION (Must Specify)

☐ -L Left Hand Toilet ☐ -R Right Hand Toilet

Notes: L (Left) or R (Right) indicates toilet location in opened position when facing the fixture. Lavy (Basin) is always located on side opposite the toilet.

BACKSPLASH/CABINET ORIENTATION (Must Specify)

- ☐ -1 Back Wall Only (One Wall)
☐ -2 Right Hand Corner (Two Wall)
☐ -3 Left Hand Corner (Two Wall)
☐ -4 Alcove (Three Wall)

FLUSH VALVE SELECTION (Must Specify)

- ☐ -HET - 1.28 GPF
☐ -ULF - 1.6 GPF (Standard)
☐ -3.5 GPF

STORAGE COMPARTMENT/DIALYSIS BOX

- ☐ -DB1 Hemo-Dialysis Box, Single Valve- PVC Ball Valve
☐ -DB1SV Hemo-Dialysis Box, Single Valve- S/S Ball Valve w/ T-Handle

COUNTERTOP COLOR SELECTION (Must Specify)

☐ -CCT Corterra® Solid Surface Countertop w/ Integral Backsplash
Color: _____

(Refer to link for colors:

<https://www.whitehallmfg.com/corterra-solid-surface>)



☐ AMA SteriTouch® Anti-Microbial Additive

* ☐ -CNCT

Corian® Countertop

☐ -CS

Stainless Steel Countertop w/ Integral Backsplash

☐ -OCR

Cast Translucent Resin Countertop w/ Integral Backsplash

Color: _____

(Refer to link for colors:

<https://www.whitehallmfg.com/resin-colors>)



☐ AMA SteriTouch® Anti-Microbial Additive

☐ -LCT

Less Countertop

CABINET COLOR SELECTION (Must Specify)



☐ -OCP Color Polyethylene Panels

Color: _____

(Refer to link for colors:

<https://www.whitehallmfg.com/poly-colors>)

☐ -LCC

High Pressure Laminate

Specify Laminate Manufacturer

Color: _____

TOILET OPTIONS



☐ -BL

Bedpan Lugs

☐ -FCI

Infectious Control Flush (Affects Cabinet Size and Rough-in. Refer to Submittal and Installation details.)

☐ -WO3

3" P-Trap (3.5 GPF Only)

PRODUCT OPTIONS

☐ -BWD

Bedpan Washer Drain

☐ -EC

Extended Countertop

☐ -EG

Enviro-Glaze (Lavy Basin Only)

Color Specify: _____

(Refer to link for colors:

<https://www.whitehallmfg.com/enviro-glaze>)

☐ -EGE

Enviro-Glaze (Toilet Exterior Only)

Color Specify: _____

(Refer to link for colors:

<https://www.whitehallmfg.com/enviro-glaze>)

☐ -SUG

Swing Up Grab Bar



Infection Prevention option

*

Increased lead time and price

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or superseded data. © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

SELECTION SUMMARY & APPROVAL FOR MANUFACTURING

Model Number & Options _____ Quantity _____

Company _____ Date _____

Contact _____ Title _____

Approval for Manufacturing/Signature _____