Division of Acorn Engineering Company



A MEMBER OF



Whitehall Bedside Patient Care Unit 41" Wide (formerly referred to as Versalette)

Model **4042**



Fixture May Show Some Available Options

Cabinet surface is either high pressure laminate with interior surface stain-resistant melamine laminate or polyethylene panels. Specify cabinet material and color selection. Corners are rounded with soft edges. Cabinet features a unique angled door which swings open to allow access to the bedpan washer and toilet paper holder. Cabinet includes a pivoting, padded toilet cover and back rest which doubles as a bedside seat. Seat color selection is determined by factory. Base molding for the cabinet is by others.

Counter has a 3" backsplash. Specify countertop material and color selection.

Lavatory is always located on the opposite side of the toilet.

Toilet is stainless steel, wall mounted siphon jet type with white plastic seat and self-sustaining check hinge.

Hydraulic Flush Valve is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF.

Bedpan Washer is concealed within cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose. An elevated pressure type vacuum breaker by others is recommended with this selection to prevent back-siphonage or backflow from occurring and possibly contaminating the water supply. Consult local codes for back flow prevention devise requirements. Optional -BWD Bed Pan Washer Drain is recommended.

Metal Template is provided for ease of installation.

Infectious Control Flush (-FCI) is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. Activation of Toilet Flush will only be possible with Toilet Cover in the closed position.

GUIDE SPECIFICATION

Provide and install Whitehall 41" wide Bedside Patient Care Unit (specify model number and options). Cabinet surface to be high pressure laminate or polyethylene panels. Base molding by others. Includes pivoting padded seat cover with back rest, hydraulic flush valve, access panel and toilet paper holder. Wall mounted, elongated, stainless steel toilet bowl with 1.6 GPF and self-sustaining hinged seat. Wall carrier by others. Concealed bedpan washer cabinet shall include a handheld bedpan washer with positive shut-off and stainless steel hose.

Please visit www.whitehallmfg.com for most current specifications.








Complies with the following standards:



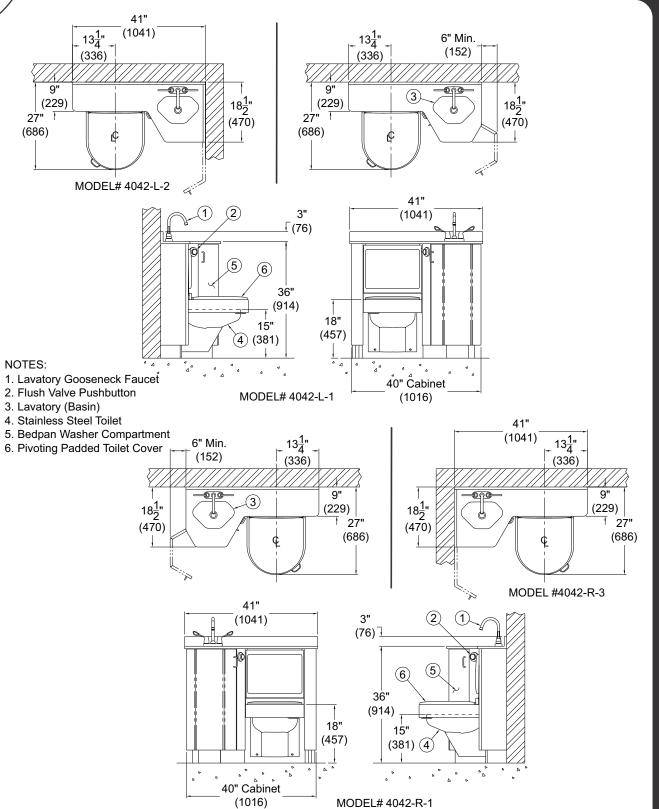

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for


use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International.

Please visit www.whitehallmfg.com for most current specifications.


Revised: 11/02/2022

-FCI OPTION INFECTIOUS CONTROL FLUSH UNIT DETAILS


(L.H. Unit Shown - R.H. Unit Opposite)

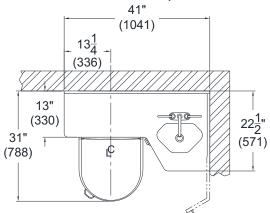


MODEL# 4042-L-3-FCI

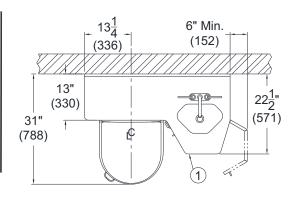

MODEL# 4042-L-1-FCI

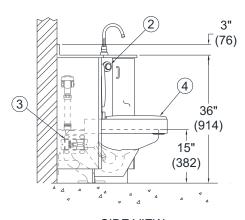

SIDE VIEW

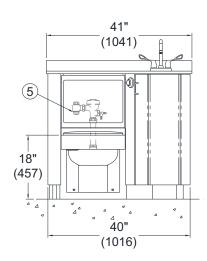

FRONT VIEW

NOTES:

- 1. Extended Cabinet
- 2. Flush Valve Pushbutton
- 3. -FCI Switch/Control Assy
- 4. Pivoting Toilet Cover
- 5. Hydraulic Flush Valve (Located in Stationary Cabinet)

NOTE: Infectious Control Flush (-FCI) is optionally available to minimize the potential for airborne contaminants and exposure to harmful bacteria resulting from Flush Valve activation when Toilet Cover is in the open position. Activation of Toilet Flush will only be possible with Toilet Cover in the closed position. Cabinet size and Flush Valve location changes to accommodate device.

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit **www.whitehallmfg.com** for most current specifications.

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

MODEL NUMBER AND OPTIONS SELECTION		COUNTERTOP COLOR SELECTION (Must Specify)		
BASE MODEL NUMBER (Must Specify) ☑ 4042 41" Wide with Multi-Sided Lavy		-CCL	Corterra® Solid Surface Countertop w/ Integral Backsplash & Lavy (Basin) Color:	
TOILET MOUNTING AND WASTE (Must OFFW Off-Floor, Wall Outlet ONFF On-Floor, Floor Outlet ONFW On-Floor, Wall Outlet	Specify)	lp □ -CCT	(Refer to link for colors: https://www.whitehallmfg.com/corterra-solid-surface) ☐ AMA SteriTouch® Anti-Microbial Additive Corterra® Solid Surface Countertop w/ Integral Backsplash	
TOILET ORIENTATION (Must Specify ☐ -L Left Hand Toilet ☐ -R Rig	r) ght Hand Toilet		Color: (Refer to link for colors:	
Notes: L (Left) or R (Right) indicates to facing the fixture. Lavy (Basin) is always opposite the toilet.			https://www.whitehallmfg.com/corterra-solid-surface) AMA SteriTouch® Anti-Microbial Additive Corian® Countertop Corian® Countertop w/ Integral Contrasting Colored	
BACKSPLASH/CABINET ORIENTATION -1 Back Wall Only (One Wall) -2 Right Hand Corner (Two Wall) -3 Left Hand Corner (Two Wall) -4 Alcove (Three Wall)	ON (Must Specify)	-cs	Lavy Bowl (Basin) -CS Stainless Steel Countertop w/ Integral Backsplash & Lavy (Basin)	
FLUSH VALVE SELECTION (Must Spe — -HET - 1.28 GPF — -ULF - 1.6 GPF (Standard) — -3.5 GPF	cify)	l _p	Color:(Refer to link for colors: https://www.whitehallmfg.com/resin-colors) AMA SteriTouch® Anti-Microbial Additive	
FAUCET SELECTION (Must Specify) - CSG Centerset Gooseneck Spout w/ Wrist Blade Handles - SO Sensor Operated Valve - SO-BAT Sensor Operated Valve-Battery Powered - VF H & C Foot Pedal Operated Air-Control Valve - LFN Laminar Flow Nozzle - LS Lavatory Hose Spray (Not Available w/ -SO) LAVY (BASIN) OPTIONS		CABINET P -OCP	Less Countertop COLOR SELECTION (Must Specify) Color Polyethylene Panels Color: (Refer to link for colors: https://www.whitehallmfg.com/poly-colors) High Pressure Laminate Specify Laminate Manufacturer Color:	
□ -ESB Embedded Stainless Steel Basin (With -CCT Only) P TOILET OPTIONS				
STORAGE COMPARTMENT/DIALYSIS BOX ☐ -DB1 Hemo-Dialysis Box, Single Valve- PVC Ball Valve ☐ -DB1SV Hemo-Dialysis Box, Single Valve- S/S Ball Valve w/ T-Handle		□ -BL Ip □ -FCI	Bedpan Lugs Infectious Control Flush (Affects Cabinet Size and Rough-in. Refer to Submittal and Installation details.)	
		☐ -WO3	3" P-Trap (3.5 GPF Only)	
		PRODUCT	Bedpan Washer Drain Extended Countertop Enviro-Glaze (Lavy Basin Only) Color Specify: (Refer to link for colors:	
		-EGE	https://www.whitehallmfg.com/enviro-glaze) Enviro-Glaze (Toilet Exterior Only) Color Specify:	
		-SUG	https://www.whitehallmfg.com/enviro-glaze) Swing Up Grab Bar	
		lp Infection	Prevention option	
		* Increase	ed lead time and price	
	7	A MADAUNO C	Donate de la Constantina del Constantina de la Constantina del Constantina de la Con	
All dimensions are nominal and subject to	▲ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov SELECTION SUMMARY & APPROVAL FOR MANUFACTURING			
manufacturer's change without notice. Whitehall assumes no responsibility fo use of			Quantity	
void or superseded data © Whitehall Manufacturing, Member of Morris Group	Company			
International. Please visit www.whitehallmfg.com for most current specifications.	Contact Approval for Manufacturing/		Title	

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862