Whitehall Manufacturing[®] Manufacturer of Healthcare and Rehabilitation Products since 1946

Care-Ware[®] Bedside Patient Care Units

Division of Acorn Engineering Compa



Whitehall Bedside Patient Care Unit 58-7/8" Wide (formerly referred to as Versalette)

> Model 4048



Cabinet features a heavy duty stainless steel modular frame and includes stainless steel bottom kick plates. Specify cabinet material and color selection. Cabinet doors provide access to the bedpan washer, dialysis box and separate panel for plumbing access. Cabinet includes a pivoting, padded toilet cover and back rest that doubles as a bedside seat. Seat color selection is determined by factory.

Counter has a 3" backsplash. Specify countertop material and color selection.

Lavatory is always located on the opposite side of the toilet.

Toilet is stainless steel, wall mounted siphon jet type with white plastic seat and self-sustaining check hinge.

Hydraulic Flush Valve is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF. Bedpan Washer is concealed within cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose. An elevated pressure type vacuum breaker by others is recommended with this selection to prevent back-siphonage or backflow from occurring and possibly contaminating the water supply. Consult local codes and ordinances for requirements. Optional -BWD Bed Pan Washer Drain is recommended.

Metal Template is provided for ease of installation.

GUIDE SPECIFICATION

Provide and install Whitehall 58-7/8" wide Bedside Patient Care Unit (specify model number and options). Cabinet frame shall be heavy duty stainless steel modular frame with stainless steel bottom kick plates. Provide pivoting padded seat cover with back rest, plumbing access and toilet paper holder. Provide elongated, stainless steel toilet bowl with 1.6 GPF and self-sustaining hinged seat complete with hydraulic flush valve and push button. Concealed bedpan washer cabinet shall include a handheld bedpan washer with positive shut-off and stainless steel hose.




Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862




Care-Ware[®] Bedside Patient Care Units

Whitehall Manufacturing[®] Manufacturer of Healthcare and Rehabilitation Products since 1946

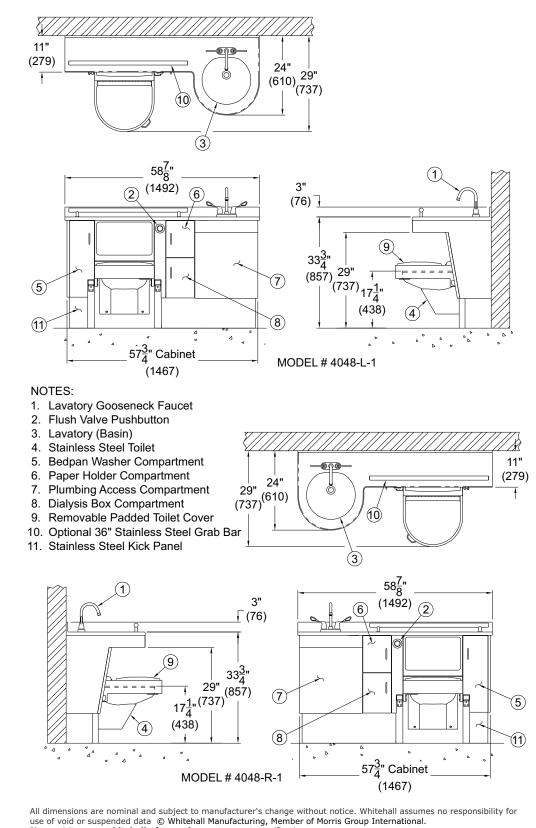

Please visit www.whitehallmfg.com for most current specifications.

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862



Whitehall Manufacturing

Manufacturer of Healthcare and Rehabilitation Products since 1946

MODEL NUMBER AND OPTIONS SELECTION

BASE MODEL NUMBER (Must Specify)

🗹 4048 58-7/8" Wide

TOILET MOUNTING AND WASTE (Must Specify)

OFFW	Off-Floor, Wall Outlet
-ONFF	On-Floor, Floor Outlet
-ONFW	On-Floor, Wall Outlet

TOILET ORIENTATION (Must Specify)

□ -L Left Hand Toilet □ -R Right Hand Toilet

Notes: L (Left) or R (Right) indicates toilet location in opened position when facing the fixture. Lavy (Basin) is always located on side opposite the toilet.

BACKSPLASH/CABINET ORIENTATION (Must Specify)

- □ -1 Back Wall Only (One Wall)
- -2 Right Hand Corner (Two Wall)
- -3 Left Hand Corner (Two Wall)
- -4 Alcove (Three Wall)

FLUSH VALVE SELECTION (Must Specify)

- -HET 1.28 GPF
- -ULF 1.6 GPF (Standard)
- 🗋 -3.5 GPF

FAUCET SELECTION (Must Specify)

- CSG Centerset Gooseneck Spout w/ Wrist Blade Handles
 SO Sensor Operated Valve
- -SO-BAT Sensor Operated Valve-Battery Powered
- -VF H & C Foot Pedal Operated Air-Control Valve
- -LFN Laminar Flow Nozzle
- □ -LS Lavatory Hose Spray (Not Available w/ -SO)

LAVY (BASIN) OPTIONS

Embedded Stainless Steel Basin (With -CCT Only)

STORAGE COMPARTMENT/DIALYSIS BOX

- -DB1 Hemo-Dialysis Box, Single Valve- PVC Ball Valve
 -DB1SV Hemo-Dialysis Box, Single Valve- S/S Ball Valve w/ T-Handle
- -DB2 Hemo-Dialysis Box, Dual Valve- PVC Ball Valves
 -DB2SV Hemo-Dialysis Box, Dual Valve- S/S Ball Valves w/ T-Handle
- □ -SS Storage Shelf

Care-Ware[®] Bedside Patient Care Units

COUNTERTOP COLOR SELECTION (Must Specify) Corterra® Solid Surface Countertop w/ Integral CCL Backsplash & Lavy (Basin) Color: (Refer to www.whitehallmfg.com for available colors, keyword search: CORTERRA) AMA SteriTouch[®] Anti-Microbial Additive CCT Corterra[®] Solid Surface Countertop w/ Integral Backsplash Color: (Refer to www.whitehallmfg.com for available colors, keyword search: CORTERRA) AMA SteriTouch[®] Anti-Microbial Additive * 🗋 -CNCT Corian[®] Countertop Stainless Steel Countertop w/ Integral Backsplash -CS & Lavy (Basin) -OCR Cast Translucent Resin Countertop w/ Integral Backsplash and Solid Surface Lavy Bowl (Basin) Color: (Refer to www.whitehallmfg.com for available colors, keyword search: RESIN) AMA SteriTouch® Anti-Microbial Additive ŀΡ 🗆 -LCT Less Countertop CABINET COLOR SELECTION (Must Specify) Р 🗋 -ОСР **Color Polyethylene Panels** Color: (Refer to www.whitehallmfg.com for available colors, keyword search: POLYETHYLENE) High Pressure Laminate -LCC Specify Laminate Manufacturer Color:

TOILET OPTIONS

- -BL Bedpan Lugs
- ▶ 🖬 -FCI Infectious Control Flush
 - -WO3 3" P-Trap (3.5 GPF Only)

PRODUCT OPTIONS

- -BWD Bedpan Washer Drain
 -EC Extended Countertop
- -EG Enviro-Glaze Color Specify:
 - Lavy (Basin) Cabinet Interior
- -EGE Enviro-Glaze Color Specify:_
- Toilet Exterior Only
- GRANGE GB 36" Grab Bar (Mounted On Counter Above Toilet)
- -SUG Swing Up Grab Bar
- Infection Prevention option
- Increased lead time and price

MWARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov All dimensions are nominal and subject to SELECTION SUMMARY & APPROVAL FOR MANUFACTURING manufacturer's change without notice. Whitehall assumes no responsibility fo use of Model Number & Options_ Quantity void or superseded data © Whitehall Manufacturing, Member of Morris Group Company_ Date International. Contact Title Please visit www.whitehallmfg.com for most current specifications. Approval for Manufacturing/Signature_

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

