Care-Ware® Bedside Patient Care Units

Division of Acorn Engineering Company



MEMBER OF OMERIS GROUP

Whitehall Swing Out Door Bedside Patient Care Unit

(formerly referred to as Swingette)

Model **4050, 4055**





Fixture May Show Some Available Options

Cabinet consists of a stationary wall section and a hinged lavatory section which conceals the toilet. A latch is provided to lock the lavatory cabinet in the open or closed position. Cabinet frame requires floor and wall anchoring. The wall section has a front access panel and a removable top for easy installation and maintenance. Exterior of cabinet is vinylclad aluminum. Specify cabinet color selection.

Counter consists of two pieces. Specify countertop material and color selection.

Lavatory is located on the swing out countertop.

Toilet is stainless steel, blowout jet type with white plastic seat and stainless steel hinge. Toilet operates with a 1.6 GPF flush valve and will withstand a 5,000 pound load without permanent damage.

Hydraulic Flush Valve is furnished standard with a 1-3/4" diameter, hydraulically actuated, remote pushbutton. Minimum required flow pressure is 25 PSI with a minimum water consumption of 1.28 GPF.

Floor Anchors are seismic rated for CBC category IV structures.

Metal Template is provided for ease of installation.

Optional Bedpan Washer with extended countertop, is concealed within cabinet and includes a handheld bedpan washer with volume control, positive shut-off and stainless steel hose. An elevated pressure type vacuum breaker by others is recommended with this selection to

prevent back-siphonage or backflow from occurring and possibly contaminating the water supply. Consult local codes for back flow prevention devise requirements. Optional -BWD Bedpan Washer Drain is recommended.

GUIDE SPECIFICATION

Provide and install Whitehall Swing Out Door (specify model number and options). Cabinet frame shall consist of a stationary wall section and a hinged lavatory section which has an arc welded heavy aluminum frame with exposed parts white Enviro-Glaze coated. Exterior of cabinet shall be vinylclad aluminum. A latch shall be provided, which locks the lavatory cabinet in the open or closed position. Provide factory installed toilet paper holder, flush valve, and secured stainless steel panel for access to valves and piping. Cabinet shall provide front toe space. Toilet shall be stainless steel, blowout jet type with elongated bowl. Trap shall pass a 2-1/8" ball. Toilet shall withstand loadings of 5,000 pounds without permanent damage. Provide factory installed white seat and pushbutton operated flush valve with vacuum breaker and checkstop. Toilet to flush with a 1.6 GPF flush valve.

Please visit **www.whitehallmfg.com** for most current specifications.









Complies with the following standards:



Care-Ware® Bedside Patient Care Units

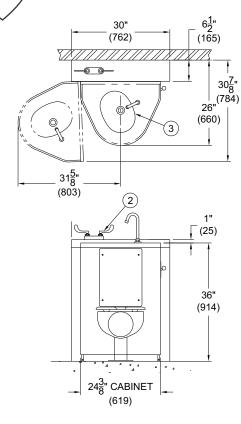


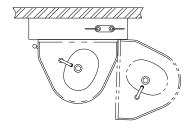

MODEL #4050/4055-R

NOTES:

- 1. LAVATORY GOOSENECK SPOUT
- 2. LAVATORY VALVE w/ WRIST BLADE HANDLES
- 3. LAVATORY (BASIN)
- 4. HYDRAULIC FLUSH VALVE PUSHBUTTON
- 5. STAINLESS STEEL TOILET
- 6. TOILET PAPER HOLDER

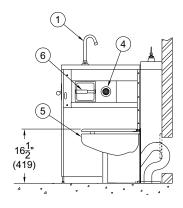

38"

(762)

—@ @


MODEL #4050/4055-L

10¹/₂"


(267)

30" (762)

(886)

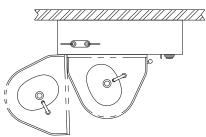


MODEL #4050/4055-L-BW-FCI

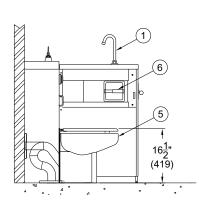

NOTES:

- 1. LAVATORY GOOSENECK SPOUT
- 2. LAVATORY VALVE w/ WRIST BLADE HANDLES
- 3. LAVATORY (BASIN)
- 4. EXPOSED HYDRAULIC FLUSH VALVE PUSHBUTTON w/ OPTIONAL -FCI INFECTIOUS CONTROL FLUSH
- 5. STAINLESS STEEL TOILET
- 6. TOILET PAPER HOLDER
- 7. -BW BEDPAN WASHER COMPARTMENT

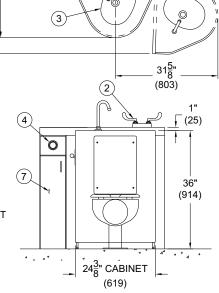

MODEL #4050/4055-R-BW-FCI

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or suspended data

Whitehall Manufacturing, Member of Morris Group International. Please visit

Www.whitehallmfg.com for most current specifications.

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

Care-Ware® Bedside Patient Care Units

MODEL NUMBER AND OPTIONS SELECTION			COUNTERTOP COLOR SELECTION (Must Specify)	
BASE MODEL NUMBER (Must Specify) □ 4050 Swing Out Door, Wall Waste Outlet □ 4055 Swing Out Door, Floor Waste Outlet		□ -CCL	Corterra® Solid Surface Countertop & Lavy (Basin) Color: (Refer to www.whitehallmfg.com for available colors, keyword search: CORTERRA)	
TOILET ORIENTATION (Must Specify) □ -L Left Hand Toilet Cabinet □ -R Right Hand Toilet Cabinet		lp □ -CCT	☐ AMA SteriTouch® Anti-Microbial Additive Corterra® Solid Surface Countertop Color: (Refer to www.whitehallmfg.com for available colors,	
Notes: -L (Left) or -R (Right) indicates orientation of hinged cabinet location in opened position when facing the fixture.		l _P	keyword search: CORTERRA) AMA SteriTouch® Anti-Microbial Additive	
CABINET VINYLCLAD ALUMINUM COLOR (Must Specify) Color:			Corian® Countertop . Corian® Countertop w/ Integral Contrasting Colored	
(Refer to www.omnova.com for available colors) Note: When wood grain laminate is used, the grain direction will be horizontal.		□ -CS □ -OCR	Lavy (Basin) Stainless Steel Countertop & Lavy (Basin) Cast Translucent Resin Countertop and Solid Surface Lavy (Basin)	
FLUSH VALVE SELECTION (Must Specify) - 1.28 GPF (HET)			Color: (Refer to www.whitehallmfg.com for available colors,	
□ -1.6 GPF (Not Available i□ -3.5 GPF (Not Available i		lp	keyword search: RESIN) AMA SteriTouch® Anti-Microbial Additive	
□ -SO Sensor Operate □ -SO-BAT Sensor Operate □ -VF H&C Foot Pedal □ -LFN Laminar Flow N □ -LS Lavatory Hose LAVY (BASIN) OPTIONS	out and Wrist Blade Handles ed Valve ed Valve, Battery Powered I Operated Air-Control Valve Nozzle Spray (Not Available w/ -SO)	-LCT -DB AND -OCPCCC	Less Countertop /OR -BW CABINET COLOR SELECTION Color Polyethylene Panels Color: (Refer to www.whitehallmfg.com for available colors, keyword search: POLYETHYLENE) High Pressure Laminate Specify Laminate Manufacturer Color:	
DIALYSIS BOX □ -DB1 Hemo-Dialysis Box, Single Valve- PVC Ball Valve □ -DB1SV Hemo-Dialysis Box, Single Valve- S/S Ball Valve w/			PPTIONS Bedpan Lugs Infectious Control Flush	
T-Handle T-Handle □ -DB2 Hemo-Dialysis	T-Handle -DB2 Hemo-Dialysis Box, Dual Valve- PVC Ball Valves -DB2SV Hemo-Dialysis Box, Dual Valve- S/S Ball Valves w/		3" P-Trap (3.5 GPF Only) T OPTIONS Extended Countertop Enviro-Glaze Color Specify:	
BEDPAN WASHER		□ -SUG ils)	Toilet Exterior Only Swing Up Grab Bar	
		L Infection	n Prevention option	
			Increased lead time and price	
All dimensions are nominal and subject to			MARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov	
manufacturer's change without r Whitehall assumes no responsibi void or superseded data © Whit	ility fo use of		/AL FOR MANUFACTURINGQuantity	
Manufacturing, Member of Morris International.	s Group Company		Date	
Please visit www.whitehallmfg.com for			Title	

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681 • Fax (626) 855-4862

Revised: 07/06/22