

Surgical Scrub Sinks



MORRIS GROUP

Whitehall **Compact Surgical** Scrub Sink **Two Station**

Model 4112

Please visit www.whitehallmfa.com for most current specifications.



Fixture May Show Some Available Options

Surgical Scrub Sink is designed for use in health care institutions providing surgeons with a convenient sink for pre-op scrub up.

Fixture is fabricated from heavy gage, type 304 stainless steel and is seamless welded construction with a satin finish. The cabinet interior is sound-deadened with a fire-resistant material. The unit is designed to be installed on the wall using a mounting carrier.

Scrub Sink is provided with a front panel which is easily removed for access to the water control valves, waste connections, stops and strainers. Scrub sink has a sloping bottom surface to minimize splashing and a 1-1/2" OD tailpiece with a 3" flat strainer drain.

Backsplash has a gooseneck spout assembly with sprayhead that can be removed for sterilization.

Hands Free Operation includes infrared sensor located on back panel.

T/P Temperature/Pressure Balancing Mixing Valve is located behind the front panel and maintains a constant water temperature. This easily adjustable, anti-scald valve will automatically shut off if the hot or cold water supply fails.

Solenoid Valve is a slow closing, anti-water hammer type.

Optional -EFW Eye/Face Wash provides a Safety Manufacturing™ Model S0660 Series Swing Down Eye-Face Wash within Sink Trough and includes Factory installed Controls® Model ET71-1-BVS-OTG Safety Mixing Valve with Temperature Gauge and Stop Valves.

Models with -EFW Option comply with USP 800, Section 5.3 Eyewash Station Requirements.

GUIDE SPECIFICATION

Provide Whitehall Compact Surgical Scrub Sink (specify model number and options). Fixture shall be fabricated from heavy gage, type 304 stainless steel, with seamless welded construction with a satin finish. Cabinet interior shall have a sound deadening, fire-resistant material. Cabinet shall also have removable access panel to allow access to water control valves, waste connections, stops and strainers. Sink shall have a sloping bottom to minimize splashing, and a 3" flat strainer drain. Gooseneck shall have a removable sprayhead. Fixture shall have a T/P temperature/pressure balancing mixing valve with slow closing, anti-water hammer solenoid valve, infrared sensor and transformer. Transformer must be wired to a GFI protected circuit. Manufacturer shall provide necessary installation instructions.

Please visit www.whitehallmfg.com for most current specifications







Surgical Scrub Sinks

BASE MODEL NUMBER

☐ 4112 Compact Surgical Scrub Sink (2 Station)

MOUNTING

☐ -MC Mounting Carrier

Product Options

☐ -EFW Eye/Face Wash (Must Specify Below)

☐ LH Station ☐ RH Station

NOTE: When specified, ET71-1-BVS-OTG Emergency Mixing Valve will be provided

☐ -LFN Laminar Flow Nozzle


-SA Splash Panel

□ -SWV Swivel Nozzle on Gooseneck

Accessories


An appropriate Chronomite Instantaneous Tankless Water Heater may be purchased separately to ship with your scrub sink. Contact your sales rep for details or visit **www.chronomite.com**


Please visit **www.whitehallmfg.com** for most current specifications.

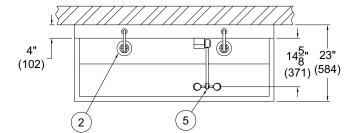

NOTES:

- 1. Gooseneck Spout Assembly
- 2. Flat Strainer Drain
- 3. Removable Access Panel
- 4. Infrared Sensor
- 5. Optional -EFW Eye/Face Wash

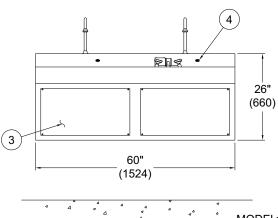

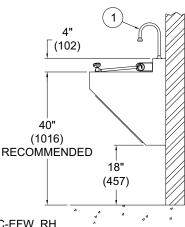

MODEL# 4112-MC-EFW_RH

WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility fo use of void or suspended data © Whitehall Manufacturing, Member of Morris Group International. Please visit www.whitehallmfg.com for most current specifications.

WARNING. Cancer and Reproductive Harm - www.r obviannings.ca.gov	
SELECTION SUMMARY & APPROVAL FOR MANUFACTURING	
Model Number & Options	Quantity
Company	Date
Contact	_Title
Approval for Manufacturing/Signature	

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681