Whitehall Manufacturing[®] Manufacturer of Healthcare and Rehabilitation Products since 1946

BestCare[®] Patients, Not Prisoners[®]

Healthcare and Ligature Resistant Products

Division of Acorn Engineering Company® A MEMBER OF

Whitehall Ligature Resistant Faucet with Piezo Buttons and Valve

Model WH3376-PPZ & WH3377-PPZ



Ligature Resistant Faucet

The Ligature Resistant Faucet is designed and developed to retrofit existing lavatories or it can be specified with Whitehall BestCare[®] ligature resistant lavatories. The Ligature Resistant Faucet is arranged to be mounted to the deck of the lavatory. Faucet assembly requires (3) 1-5/16" to 1-1/2" diameter holes on 4" or optional 8" centerset. Conical faucet is 303 stainless steel and provides vandal and suicide resistance. Includes a 0.35 GPM vandal resistant flow nozzle.

(**Note:** Nozzle with a 0.5 GPM Flow may be Purchased Separately using P.N. 2998-110-000; Not intended for use with Whitehall[®] Basins due to incompatible Spray Arc.)

Valve is a Electronic valve with Piezo button(s) which require less than 5 pounds of force to activate valve. Valve is metering with non-hold open feature. Metering valve factory set for 8 second run time and has a timing range of 0-100 seconds. Valve can be remotely located up to 10 feet from the operating pushbutton. 120VAC/9VDC plug-in transformer is provided. Batteries are not included.

Fixture is ADA Compliant. Unit conforms with ADA requirements for accessibility when installed correctly. Compliance is subject to the interpretation and requirements of the local code authority.

Optional WHST70-12 Mixing Valve option delivers tempered water flow by compensating for pressure and temperature fluctuations. Valve is to be field set to 105 Fahrenheit and includes strainers and integral checks. Operating range is 30 to 100 PSI.

GUIDE SPECIFICATION

Provide and install Ligature Resistant Faucet Assembly (specify model number and options). Faucet valve shall be electronic, metering, nonhold open type. Assembly shall include 0.35 GPM vandal resistant flow control nozzle, hot and cold Piezo button and faucet connections.



Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681



	Whitehall	Manufactu	iring
/	Manufacturer of Healthcare an	d Pahabilitation Products	since 1016

BestCare® Patients, Not Prisoners®

Healthcare and Ligature Resistant Products

MODEL NUMBER AND OPTIONS SELECTION:


BASE MODEL NUMBER

(Use The Following For Basins Manufactured By Others)

🖵 WH3376-PPZ	Faucet with Electronic Valve and Piezo Pushbutton, Single Temp. with 4" Centerset			
🔲 WH3376-PPZ-BAT	Faucet with Battery Operated Electronic Valve and Piezo Pushbutton, Single Temp. with 4" Centerset (Batteries Not Included)			
UWH3377-PPZ	Faucet with Electronic Valve and Piezo Pushbuttons, Hot & Cold with 4" Centerset			
WH3377-PPZ-BAT	Faucet with Battery Operated Valve and Piezo Pushbutton, Hot & Cold with 4" Centerset (Batteries Not Included)			
🔲 WH3376-8IN-PPZ	Faucet with Electronic Valve and Piezo Pushbutton, Single Temp. with 8" Centerset			
UH3376-8IN-PPZ-BAT	Faucet with Battery Operated Valve and Piezo Pushbutton, Single Temp. with 8" Centerset (Batteries Not Included)			
🗋 WH3377-8IN-PPZ	Faucet with Electronic Valve and Piezo Pushbuttons, Hot & Cold with 8" Centerset			
UH3377-8IN-PPZ-BAT	Faucet with Battery Operated Valve and Piezo Pushbutton, Hot & Cold with 8" Centerset (Batteries Not Included)			
(Use The Following For Whitehall BestCare [®] Basins)				
🗋 WH3376L-PPZ ັ	Faucet with Electronic Valve and Piezo Pushbutton, Single Temp. with 4" Centerset			
UH3376L-PPZ-BAT	Faucet with Battery Operated Electronic Valve and Piezo Pushbutton, Single Temp. with 4" Centerset (Batteries Not Included)			
🔲 WH3377L-PPZ	Faucet Electronic Valve and Piezo Pushbuttons, Hot & Cold with 4" Centerset			
UH3377L-PPZ-BAT	Faucet with Battery Operated Value and Piezo Pushbutton, Hot and Cold with 4" Centerset (Batteries Not Included)			

OPTIONS: UHST70-12

ASSE 1070 Compliant Hot & Cold, Temperature / Pressure Balancing Mixing Valve

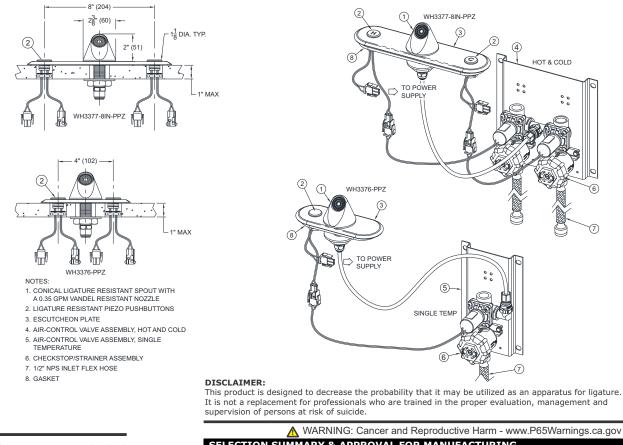

All dimensions are nominal and subject to manufacturer's change without notice. Whitehall assumes no responsibility for use of void or superseded data. Whitehall Manufacturing[®], Member of Morris Group International. Please visit **www.whitehallmfg.com** for most current specifications.

MARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov						
SELECTION SUMMARY & APPROVAL FOR MANUFACTURING						
Model Number & Options	Qı	uantity				
Company	Date	e				
Contact	Title					
Approval for Manufacturing/Signature						

Whitehall Mfg. • P.O. Box 3527 • City of Industry, CA 91744 • (800) 782-7706 • (626) 968-6681

